




# Cordalera Guaranteed Molding Instructions

If you have any questions please call:  
208-377-0335 or 509-921-5585


# STAIRNOSE

Stairnose is used to decorate stairs and steps

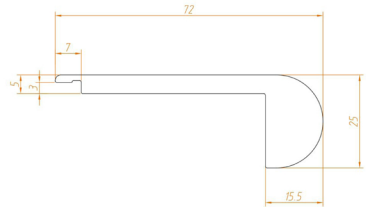


## INSTALLATION

**1**

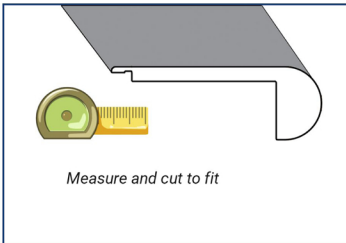

**2**


*Apply a layer of special glue along the bottom of the stairs. Glues Allowed  
Pallmann P5 or P7  
Loba Wakol MS260 & 262*

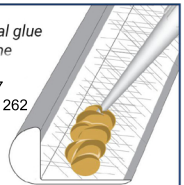

*Sand backside of the molding with 40-80 grit sandpaper and the substrate (plywood etc) for best adhesion.*


**3**

*Carefully place the stairs in the glued position. Let the glue cure according to the instructions*

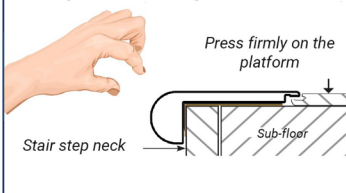


**4**

*Nails can be used to ensure stability*

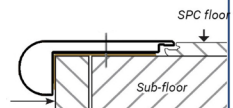


## T - MOLDING

T – molding is used to separate rooms, different types of flooring materials and approximately equal thickness

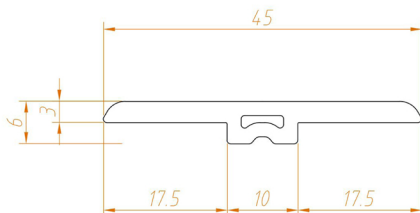


### INSTALLATION

**1**

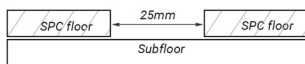


Keep a 25mm gap between the two floors to install.

**2**

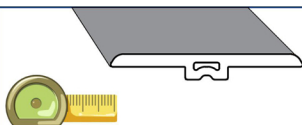


Measure and cut to fit

**3**

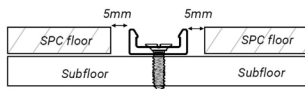

Place u - track in the middle of the gap, align 5mm between the floor and the track. Screw into the subfloor (or use special glue)


**4**

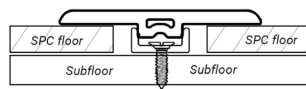

Press the molding in along the length of the u - track


## REDUCER

Reducer is used to create a smooth transition between two floors of different heights or between the floor and the carpet

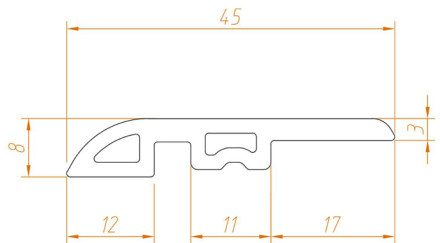


### INSTALLATION


**1**

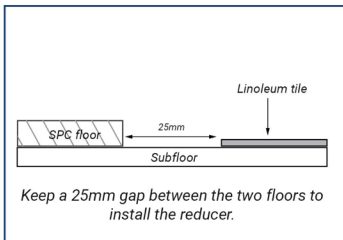


**2**

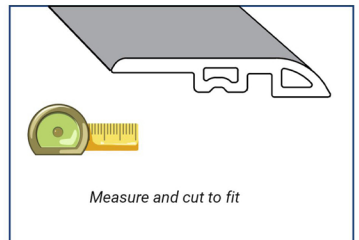

**3**

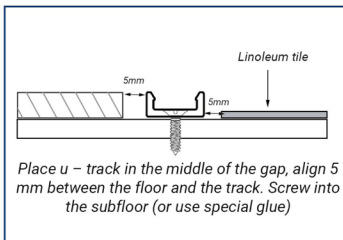


**4**

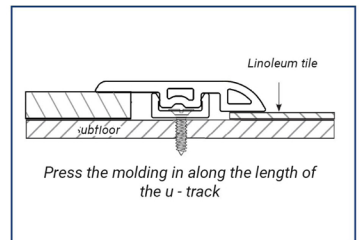




## END CAP

End cap is used to fill the gap between the floor tile and the base of the wall. It's ideal for finishing floors next to balcony doors or entryways

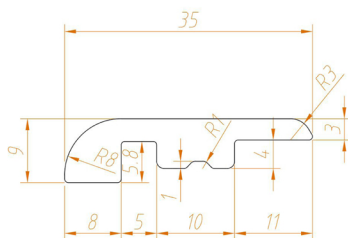


## INSTALLATION

**1**




Keep a 25mm gap between the two floors to install.

**2**

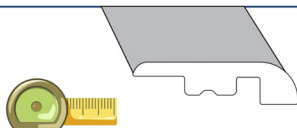


Measure and cut to fit

**3**

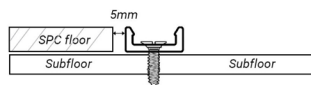

Place u - track in the middle of the gap, align 5 mm between the floor and the track. Screw into the subfloor (or use special glue)


**4**

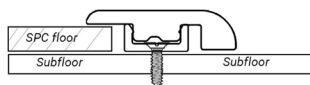

Press the molding in along the length of the u - track


## U - TRACK

U - track is fixed on the floor to install all kinds of accessories, in order to fix the accessory without shifting, peeling

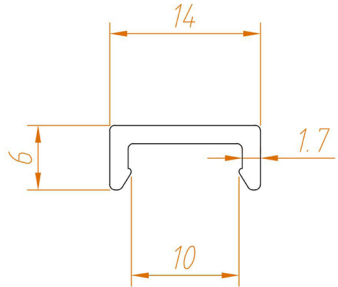


### INSTALLATION

**1**




Keep a distance of 2.5cm between the two floors to install the track

**2**

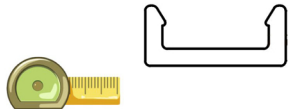

Measure and cut to fit

**3**

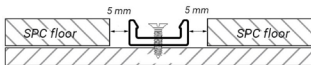

Place u - track in the middle of the gap, align 0.5cm between the floor and the track. Screw into the subfloor (or use special glue)